

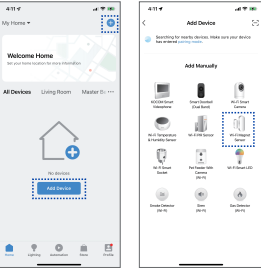 

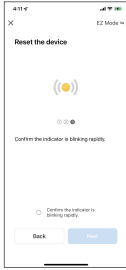 
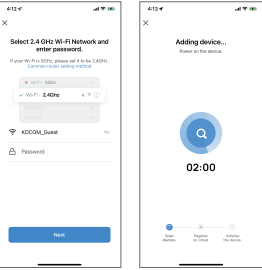 
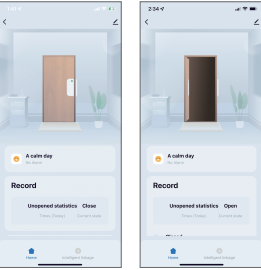 



<div data-bbox="118 51 423 193"> <div>KOCOM</div> <div>SMART MAGNET SENSOR</div> </div> <div data-bbox="118 218 423 244"> <div>KDY-MC400B</div> </div> <div data-bbox="118 334 423 463"> <div> <div>Wi-Fi Connection</div> <div>App Control</div> </div> </div> <div data-bbox="118 489 423 534"> <div>※ Please read this manual carefully before use and keep it for future reference.</div> </div>	<div data-bbox="484 64 653 96"> <div>Basic Parameter :</div> </div> <div data-bbox="484 122 772 334"> <div>Battery : DC3V AAA 1.5V*2</div> <div>Standby Current : ≤45uA</div> <div>Protocol : IEEE 802.11b/g/n</div> <div>Wireless Range : Max,50m</div> <div>Operating temperature : -10℃~40℃(14℉~104℉)</div> <div>Operating humidity : 20%~85%</div> <div>Standby time : Max,1 year</div> <div>WiFi : 802.11b/g/n (2.4GHz)</div> </div>	<div data-bbox="823 64 924 96"> <div>Install APP</div> </div> <div data-bbox="823 122 1145 186"> <div>Download APP : scan the QR code below to download and install.</div> <div>Register and login : open the "KOCOM Home" APP to register and login according to the prompts.</div> </div> <div data-bbox="914 257 1057 444"> <div>  <div>iOS / Android</div> </div> </div>	<div data-bbox="1179 64 1280 96"> <div>User Guide</div> </div> <div data-bbox="1195 122 1500 495"> <div> <div> <div>1. Push the mounting bracket upward and take out the bracket, then insert the battery.</div> <div>2. Put the battery into the battery bin and place it according to the graphics in the battery bin. After two batteries are loaded, the indicator lights are always on and then off.</div> </div>  </div> </div>	<div data-bbox="1534 64 1856 109"> <div>3. Register with mobile phone number, click "My Home" interface "+" or click "Add Devices" in the middle blank.</div> </div> <div data-bbox="1534 141 1856 167"> <div>Select the security sensor and click on the door magnetic sensor.</div> </div> <div data-bbox="1568 238 1829 508">  </div>	<div data-bbox="1890 64 2212 148"> <div>4. With the card pick-up pin in the accessory package, hold the reset key for more than 5 seconds, and the indicator flashes into the automatic network connection mode. Enter the WIFI password according to the prompt, and click to confirm.</div> </div> <div data-bbox="1897 264 2032 412">  </div> <div data-bbox="2076 238 2202 508">  </div>	<div data-bbox="2246 64 2568 212"> <div>5. In the automatic network connection mode, the indicator flashes quickly, holds the reset key for 5 seconds with the card pick-up pin, the indicator flashes slowly, and enters the manual network connection mode, APP chooses compatible mode. According to the prompt, enter "WiFi password" and click confirmation, then switch to the WIFI settings interface. Connect your WIFI network and return to APP to continue adding devices.</div> </div> <div data-bbox="2280 238 2541 508">  </div>	<div data-bbox="2601 64 2923 148"> <div>6. Network connection successfully, click on the door magnetic icon to enter the interface, open the door magnetic, APP will remind you the door is open, close the magnet door magnetic APP will remind you the door is closed.</div> </div> <div data-bbox="2635 238 2896 508">  </div>	<div data-bbox="3042 251 3201 328">  <div>Easy, Convenient, Safe home</div> </div>
--	---	--	--	---	--	---	--	---

<div data-bbox="118 701 423 843"> <div>KOCOM</div> <div>스마트 자석감지 센서</div> </div> <div data-bbox="118 869 423 895"> <div>KDY-MC400B</div> </div> <div data-bbox="118 998 423 1127"> <div> <div>Wi-Fi Connection</div> <div>App Control</div> </div> </div> <div data-bbox="118 1165 423 1191"> <div>※ 사용 전에 본 설명서를 주의 깊게 읽고 나중에 참조할 수 있도록 보관하십시오.</div> </div>	<div data-bbox="484 714 569 747"> <div>제품 사양</div> </div> <div data-bbox="484 772 772 985"> <div>배터리 : DC3V AAA 1.5V*2</div> <div>대기 전류 : ≤45uA</div> <div>프로토콜 : IEEE 802.11b/g/n</div> <div>무선 범위 : 최대 50m</div> <div>동작 온도 : -10℃~40℃(14℉~104℉)</div> <div>동작 습도 : 20%~85%</div> <div>대기 시간 : 최대 1년</div> <div>무선 표준 : WiFi 2.4G 802.11b/g/n</div> </div>	<div data-bbox="840 714 941 747"> <div>앱 다운로드</div> </div> <div data-bbox="840 772 1145 862"> <div>APP 다운로드 : 아래 QR 코드를 스캔하여 다운로드하고 설치하십시오.</div> <div>등록 및 로그인 : "KOCOM Home" APP을 열어 메시지에 따라 등록 및 로그인합니다.</div> </div> <div data-bbox="914 920 1057 1107"> <div>  <div>iOS / Android</div> </div> </div>	<div data-bbox="1179 714 1297 747"> <div>제품 사용 안내</div> </div> <div data-bbox="1195 772 1500 1017"> <div> <div>1. 마운팅 브라켓을 위로 밀어 브라켓을 꺼낸 다음 배터리를 삽입합니다.</div> <div>2. 그림에 따라 배터리를 끼워 넣습니다. 두 개의 배터리가 장착된 후에는 표시등이 항상 켜졌다가 꺼집니다.</div> </div>  </div>	<div data-bbox="1534 714 1856 759"> <div>3. 홈화면에서 우측상단의 "+" 버튼을 누르거나, 화면중앙의 "기기추가"를 누르십시오. 이후, "도어센서"를 누릅니다</div> </div> <div data-bbox="1568 895 1829 1165">  </div>	<div data-bbox="1890 714 2212 785"> <div>4. 동봉된 픽업 핀으로 리셋키를 5초 이상 누르고 있으면 표시등이 자동 네트워크 연결 모드로 깜박입니다. 화면에 따라 WIFI 암호를 입력하고 확인을 눌러주면 센서가 성공적으로 추가됩니다.</div> </div> <div data-bbox="1897 920 2032 1069">  </div> <div data-bbox="2076 895 2202 1165">  </div>	<div data-bbox="2246 714 2568 843"> <div>5. 자동 네트워크 연결 모드에서는 표시등이 빠르게 깜박입니다. 자동 연결이 안될 경우 AP 모드로 전환하고 핀으로 리셋키를 5초간 누르고 있으면 표시등이 천천히 깜박이며 수동 네트워크 연결 모드로 전환됩니다. APP에서 호환 모드를 선택합니다. WIFI 비밀번호를 입력하고 확인을 누른 다음 WIFI 설정 인터페이스로 전환합니다. WIFI를 연결하고 APP으로 돌아가 디바이스를 계속 추가합니다.</div> </div> <div data-bbox="2280 895 2541 1165">  </div>	<div data-bbox="2601 714 2923 824"> <div>6. 기기 등록이 완료되면, 도어 마그네틱 아이콘을 클릭하여 인터페이스에 들어갑니다. 도어 마그네틱을 열면 APP에서 도어가 열려 있음을 알려주고, 도어 마그네틱을 닫으면 APP에서 도어가 닫혀있음을 알려줍니다.</div> </div> <div data-bbox="2635 895 2896 1165">  </div>	<div data-bbox="3076 701 3161 734"> <div>제품보증서</div> </div> <div data-bbox="2957 740 3296 940"> <div>KOCOM 해당 제품의 무상 보증 기간은 구매일로부터 1년입니다. 제품의 결함으로 확인된 제품에 대해서는 소비자 보호법에 의한 소비자 보상 기준에 따라 보상하여 드립니다. 품질보증기간 중 소비자의 과실이 아닌 제품의 하자로 인한 경우에만 교환이나 무상 A/S 가 가능합니다. 소비자의 취급 부주의 또는 품질보증 기간이 경과된 제품은 피해 보상 책임을 지지 않습니다. 제품 사용시 문제가 발생할 경우 절대 분해하지 마시고, 아래 고객센터로 문의주시기 바랍니다. 제품을 임의로 분해하시면 보증기간 내에도 무상 A/S를 받으실 수 없습니다.</div> </div> <div data-bbox="2957 959 3296 1017"> <div>*안전한 제품 사용을 위해 본 사용설명서의 내용을 잘 숙지해주시고 이 외에 다른 방법으로 제품 사용시 발생하는 문제에 대해서는 책임을 지지 않습니다.</div> </div> <div data-bbox="3059 1030 3177 1062"> <div>A/S 및 고객센터</div> </div> <div data-bbox="2957 1062 3296 1107"> <div>제품에 이상이 있거나 문의사항이 있으신 경우 본 제품의 구입 판매점 혹은 코콤 고객센터로 연락바랍니다.</div> </div> <div data-bbox="2957 1133 3296 1178"> <div>1577-0051 김포사옥 (10136)</div> <div>kocomas@kocom.co.kr 경기도 김포시 고촌읍 아라욱로 22</div> </div>
---	--	---	---	---	--	---	---	---